


MODEL 329

MAY BE INSTALLED IN A SOLID FUEL BURNING FIREPLACE, AS A FREESTANDING FIREPLACE OR WITH AN OPTIONAL WOODEN SURROUND.

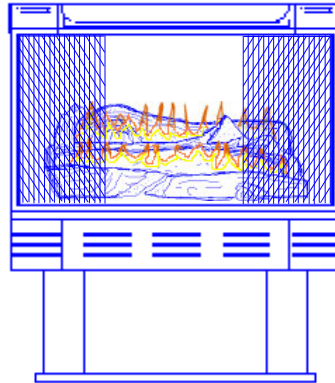

VENT-FREE



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

This is an unvented gas-fired heater. It uses air (oxygen) from the room in which it is installed. Provisions for adequate combustion and ventilation air must be provided. Refer to section "Producing Adequate Ventilation" page 32.

This appliance may be installed in an aftermarket, permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

Manufacturer: NEW BUCK CORPORATION
P.O. Box 69
8000 Highway 226 South
Spruce Pine, NC 28777

This appliance is intended for supplemental heating.

Revised December 2006

TABLE OF CONTENTS 329

SECTION I: Safety Information.....	1
SECTION II: Fireplace Preparation.....	4
Fireplace Clearances	5
Gas Connection.....	5
Placement of Logs.....	6-7
Gas Pressure Check.....	8
Lighting Instructions - ITT Millivolt Valve.....	9
Lighting Instructions - SIT Modulating Valve or -SIT Manual.....	13
Lighting Instructions - SIT Millivolt Valve.....	17
Flame Check	21
Heat Output.....	21
Wiring Diagram	22
SECTION III: Solid Fuel Burning Fireplace Installation (FP).....	24
SECTION IV: Freestanding Installation (FS).....	26
SECTION V: Alcove Installation	28
SECTION VI: Wooden Surround Installation (WS).....	29
SECTION VII: Installation-After Market Mobile Home	31
SECTION VIII: Producing Adequate Air.....	32
Ventilation Air From Inside.....	34
Ventilation Air Outdoors	35
Important Safeguards.....	36
Cleaning.....	36
Trouble Shooting	37
Service and Repair Parts	41
Replacement Parts.....	42
Warranty	50

